

The product described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

### **Copyright Notice**

Copyright ©2008 All rights reserved.

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means without the written permission of our corporation.

### **.Disclaimer**

We provides this document “AS IS”, without warranty of any kind, neither expressed nor implied, including, but not limited to, the particular purpose. We may make improvements and/or changes in this document or in the product described in this document at any time.

This document could include technical inaccuracies or typographical errors.

### **Using This Document**

This document is intended for use by the engineer when operating

**8E1+100M Optical Multiplexer.** Though every effort has been made to assure that this document is current and accurate, more information may have become available subsequent to the production of this guide. In that event, please contact your representative for additional information that may help in the operating process.

## General Safety Requirements

Please read the following notes on safety, so as to avoid personal injury, and prevent this product as well as any other products connected with it from damaging. In order to avoid the possible danger, it's only permitted to use the product in specified ranges.

**Only the technicians authorized by our company can implement the relative maintenance work.**

### Avoid Fire or Personal Injury

**Use appropriate power supply.** Check the type of power supply for this product as well as the positive and negative polarity carefully.

**Correct connection and disconnection.** When the equipment is in power-on condition, do not connect or disconnect the data cable casually.

**Product Earthing.** In order to avoid electric shock, the earthed conductor must be connected with the ground. Before it is connected with the input or output terminal of this product, please ensure that this product has been earthed correctly.

**Correct connection.** When connecting, customers should use the accessories equipped with the product when leaving factory. If the customers implement special connection, please pay attention to the distribution requirements for turning corners.

**Do not operate when there is no equipment cover.** If the cover or panel has been removed, don't operate this product.

**Avoid contacting with the exposed circuit.** When this product is electrified, do not touch the exposed connection points or components.

**When there is questionable failure, do not operate.** If you doubt that this product has been damaged, please tell the technicians authorized by our company to do maintenance.



**Provide sound ventilation environment.**

**Do not operate in humid environment.**

**Do not operate in explosive environment.**

**Please keep the surface of this product clean and dry.**

# Table of Contents

|   |           |
|---|-----------|
| <b>PREFACE</b> .....  | <b>5</b>  |
| <b>1. INTRODUCTION</b> .....                                    | <b>7</b>  |
| 1.1 OVERVIEW.....   | 7         |
| 1.2 FEATURES.....   | 7         |
| <b>2. HARDWARE DESCRIPTION</b> .....                            | <b>7</b>  |
| 2.1 THE FRONT PANEL DESCRIPTION .....                           | 8         |
| 2.1.1 LED Indicators .....                                      | 8         |
| 2.1.2 Switches Settings and Explanation: .....                  | 11        |
| 2.1.3 Hot-line port switch .....                                | 15        |
| 2.1.4 Phone physical interface .....                            | 15        |
| 2.1.5 CONSOLE/NM(Network Management )interface .....            | 15        |
| 2.1.6 RS232 interface .....                                     | 错误!未定义书签。 |
| 2.1.7 Optical interface .....                                   | 15        |
| 2.2 THE REAR PANEL DESCRIPTION.....                             | 15        |
| 2.2.1 Ethernet Interface .....                                  | 16        |
| 2.2.2 E1 physical interface.....                                | 16        |
| 2.2.3 RS-232/ExAlm .....  | 错误!未定义书签。 |
| 2.2.4 Power supply .....  | 16        |
| <b>3. TECHNICAL SPECIFICATIONS</b> .....                        | <b>16</b> |
| 3.1 ENVIRONMENTAL .....   | 16        |
| 3.2 POWER REQUIREMENTS .....                                    | 16        |
| 3.3 MECHANICAL SPECIFICATIONS .....                             | 16        |
| 3.4 OPTICAL INTERFACE SPECIFICATION.....                        | 17        |
| 3.5 E1 INTERFACE SPECIFICATION.....                             | 17        |
| 3.6 ETHERNET SPECIFICATIONS (RESERVED,NOT EFFECT THE VERSION) . | 17        |
| 3.7 RS232 SPECIFICATIONS .....                                  | 17        |
| <b>4. GETTING STARTED</b> .....                                 | <b>18</b> |
| 4.1 DELIVERABLES.....   | 18        |
| 4.2 CONFIGURATION STRAPS .....                                  | 18        |
| <b>5. APPENDIX</b> .....  | <b>19</b> |
| 5.1.METHOD OF MAKING LINES .....                                | 19        |
| 5.1.1. Method of making E1 lines.....                           | 19        |
| 5.1.2. RS232 and alarm output interface.....                    | 21        |
| 5.1.3. Phone interface .....                                    | 22        |
| 5.1.4. CONSOLE and RS485 network management .....               | 22        |
| 5.2 TROUBLE SHOOTING .....                                      | 23        |

## Preface

As a communication media, optical fiber experienced stages of library, trial for commerce and small-scale application and has come into large-scale application nowadays. Today, optical fiber has been used popularly within buildings as a communication media to some extent, and also its entering into household isn't only be talked on forum. Such tendency proved that optical fiber has unexampled advantages, which bring out dramatic decrease in making cost. Nowadays optical fiber is no longer a kind of expensive and rare communication material.

Because its easy availability and it could meet people's increasing demands for environment protection, optical fiber go without saying to become the top choice as a communication media.

As a hardcore of the optical multiplexer manufactured by our company, large-scale PLD(programmable logic device) make its updating speed far faster than traditional optical multiplexer on the base of ASIC. So it is especially suitable for many occasions when high reliability and complete additional function are required, such as some special-purpose communication network including mobile, unicom, telecom, power, police, army, highway, avigation , etc. The inner software and hardware are all modularity. The hardware makes use of large-scale FPGA integrating coding, decoding , message insertion and alarm, which makes the circuit simple and improve the reliability of the device.

The main content of this manual includes the installation and user guide of the 8E1+100M Optical Multiplexer.

Please read the manual before the first using and use the device

following the guide to avoid the unnecessary destroy .

We are appreciated for your using our device, and any comments and questions concerning the device would be seen as your great support. Thank you.

## 1. Introduction

This chapter is an introduction to 8E1+100M Optical Multiplexer and includes the following sections:

Overview

Features

### 1.1 Overview

This device apply large-scale integrated circuit developed independently as its hardcore and can multiple 8-channel E1 signal, 2-channel 100M Ethernet and 2-channel RS232 and 1 hot-line port onto a pair of fiber to realize the hybrid transmission.

### 1.2 Features

High density monolithic design for easy integration

Complete function switches and alarm indications to display the working status, and the local led indications can display the status of remote device

Supports the loop back function on each E1 channel

Supports two Ethernets are 100M switch-mode channels

Supports two RS232 channels or one RS232 and one ex-warning indications channel

Supports console interface according the order of the customer

Supports one hot-line port according the order of the customer

Supports the AC220V and DC48V power supply simultaneously

## 2. Hardware Description

This chapter is an introduction to the hardware of 8E1+100M Optical Multiplexer and includes the following sections:

The Front Panel Description

The Rear Panel Description

**2.1 The Front Panel Description**



**Figure 2-1 The Front Panel Layout**

There are thirty-four LED, one 16-bit DIP switch and on the front panel

**2.1.1 LED Indicators**

| Name | Color  | Function                                | Description   |   |
|------|--------|---|---------------|---|
| PWR  | Green  | Power Status                            | Active        | supply of DC5V Power works normal   |
|      |        |   | Off           | Power off or power error exists   |
| SYS  | Yellow | the rulers of device working parameters | Active        | Following the network management settings                                 |
|      |        |   | Off           | Following the DIP switches settings                                       |
|      |        |   | Blanking      | The DIP control switches is unlock when followed the DIP switches setting |
| PHO  | Yellow | phone calling status                    | Active        | Both sides are in through status  |
|      |        |   | Off           | Both sides are in off -hook status  |
|      |        |   | Fast Blanking | The local is called   |
|      |        |   | Slow Blanking | The local is calling  |



8E1+100M Optical Multiplexer User Manual

|   |        |  |        |  |
|---|--------|--|--------|--|
| RA  | Yellow | Remote alarm indicator                         | Active | alarm event is occurred in the fiber or some E1 channel of remote device |
|   |        |  | Off    | normal   |
| LOS                                       | Red    | Alarm indicator of optical line                | Active | Loss of signal at optical interface                                      |
|   |        |  | Off    | Line is normal   |
| SYL                                       | Red    | Alarm indicator of optical frame-lost          | Active | Out of frame at optical line   |
|   |        |  | Off    | Optical input is correct.  |
| E3  | Red    | Received code error ratio $\geq 10^{-3}$       | Active | Received code error ratio $\geq 10^{-3}$                                 |
|   |        |  | Off    | normal   |
| E6  | Yellow | Received code error ratio $\geq 10^{-6}$       | Active | Received code error ratio $\geq 10^{-6}$                                 |
|   |        |  | Off    | normal   |
| SOL<br>(Reserved, Not effect the version) | Yellow | The optical signal los of the not working port | Active | When the optical signal of current not working port lost                 |
|   |        |  | Off    | Normal   |
| OSB                                       | Yellow | Optical  | Active | A port selected  |

8E1+100M Optical Multiplexer User Manual

|                                   |       |  |               |  |
|-----------------------------------|-------|--|---------------|--|
| (Reserved,Not effect the version) |       | port select indicator                      | Off           | B port selected                              |
| E1L1~E1L8                         | Red   | Alarm indicator of the 1st ~8th E1 channel | Active        | The 1st E1 channel is code-breaking          |
|                                   |       |  | Off           | normal                                       |
|                                   |       |  | FAST Blanking | The local E1line is in loop back status      |
|                                   |       |  | SLOW Blanking | The remote E1line is in loop back status     |
| E1L9~E1L16                        | Red   | (Reserved,Not effect the version)          |               |  |
| Link 1-2                          | Green | Ethernet Link status                       | Active        | when linked                                  |
|                                   |       |  | Off           | Not Linked                                   |
|                                   |       |  | Blanking      | blinking when transmitting or receiving data |
| DUP 1-2                           | Green | Ethernet Duplex status                     | Active        | when in Full Duplex operation                |
|                                   |       |  | Off           | when in Half Duplex operation                |
| SPD 1-2                           | Green | Ethernet Speed status                      | Active        | when in 100M operation                       |
|                                   |       |  | Off           | when in 10M operation                        |

Note :

1. Every LED indicators can display the remote working status according demand command except the PWR, PHO, RA
2. when SYS displays the remote the status , the flash mode is lack.
3. the display priority from high to low as follows : fast blanking ,slow blanking, on ,off
4. fast blanking period is 0.5 second, the duty factor is 50%
5. fast blanking period is 2 seconds, the duty factor is 50%
6. all indicators would be on if the fiber interface is selected to display the remote status when the fiber interface works not correct

### 2.1.2 Switches Settings and Explanation:

**Note:**To make the setting of the DIP switches effective ,please turn on the S1 [1] first, then do the setting, and then turn the S1 [1] off.

| Name |     | Function                                | Description |  |   |
|------|-----|---|-------------|--|---|
| SW1  | [1] | Setting control lock                    | ON          | The setting lock is unlock                               |   |
|      |     |   | Off         | The setting lock is lock                                 |   |
|      | [2] | The alarm buzzer silence                | ON          | The alarm buzzer is silence                              | The phone beeper is not controlled by this switches |
|      |     |   | Off         | The alarm buzzer is on                                   |   |
|      | [3] | The status select of the led indicators | ON          | The led indicators display the local status              |   |
|      |     |   | Off         | The led indicators display the remote status             |   |
|      | [4] | Ethernet auto                           | On          | Cut-off the local 100M Ethernet port when optical alarms |   |

8E1+100M Optical Multiplexer User Manual

|     |        |                                     |     |  |   |
|-----|--------|-------------------------------------|-----|--|---|
|     |        | cut-off                             | Off | Does not cut-off the local 100M Ethernet port when optical alarms                |   |
|     | [5]    | VLAN setting                        | On  | Turn on the Isolate function of two Ethernet ports                               |   |
|     |        |                                     | Off | Turn off the Isolate function of two Ethernet ports                              |   |
|     | [6..7] | Reserved                            |     |  |   |
|     | [8]    | Mask E1 line pseudo-alarm           | ON  | mask the loss alarm of E1 line that are line loss when switching from OFF to ON. | Need to turn the switch from OFF to ON again to process the pseudo -alarm |
|     |        |                                     | OFF | Unmask the E1 line loss alarm  |   |
| SW2 | [1]    | Mask the E1 line loop back function | ON  | Loop back function is valid  | [SW-2~7] are valid only if the switch is on                               |
|     |        |                                     | Off | Loop back function is invalid  |   |

|       |   |                     |                                  |   |
|-------|---|---------------------|----------------------------------|---|
| [2]   | The select of local/remote loop back of E1 line | ON                  | Set the local device loop back   |   |
|       |   | Off                 | Set the remote device loop back  |   |
| [3]   | Set all the E1 lines loop back                  | ON                  | Set all the E1 lines loop back   | [SW-4~7] are valid only if the switch is off          |
|       |   | Off                 | Cancel the all E1 line loop back |   |
| [4~7] | The line select of E1 line loop back            | [4~7]=[ONOFFOFFOFF] | The 1st E1 line loop back        | The loop back deirection depend on the switch [sw2-2] |
|       |   | [4~7]=[OFFONOFFOFF] | The 2nd E1 line loop back        |   |
|       |   | [4~7]=[ONONOFFOFF]  | The 3rd E1 line loop back        |   |
|       |   | [4~7]=[OFFOFFONOFF] | The 4th E1 line loop back        |   |
|       |   | [4~7]=[ONOFFONOFF]  | The 5th E1 line loop back        |   |

|     |                                |     |                      |                           |
|-----|--------------------------------|-----|----------------------|---------------------------|
|     |                                |     | [4~7]=[ OFFONONOFF]  | The 6th E1 line loop back |
|     |                                |     | [4~7]=[ ONONONOFF]   | The 7th E1 line loop back |
|     |                                |     | [4~7]=[ OFFOFFOFFON] | The 8th E1 line loop back |
| [8] | Network management type select | ON  | RS-232 Console       |                           |
|     |                                | OFF | invalid              |                           |

Tips (loop back figures) :

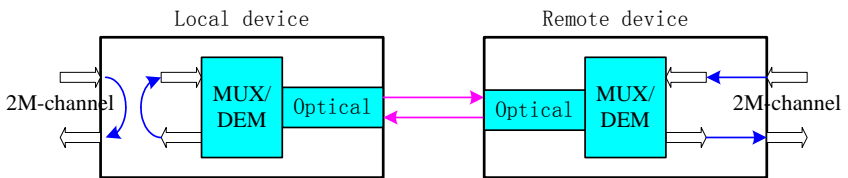


Figure 2-2 local loop back

Note: the E1 channel will be loop back to the remote device when set as loop back local.

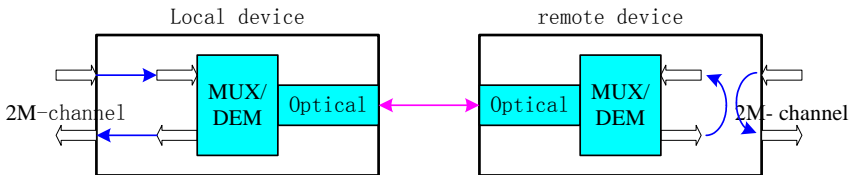


Figure 2-3 remote loop back

Note : the remote device will loop back to local when set as the remote loop back

**2.1.3 Hot-line port switch**

ON: pick up ,to call remote peer or answer the remote calling  
 OFF: off -hook

Note: the phone is only controlled by this switch.

**2.1.4 Phone physical interface**

phone physical interface: RJ11-4

**2.1.5 CONSOLE/NM(Network Management )interface**

reserved

**2.1.6 RS-232/ExAlm**

Physical interface :RJ45 jack


Provides two RS-232 channels or one RS-232 + 1 ex-alarm channel

**2.1.7 Optical interface**


RX : indicators the receiving of optical signal

TX : indicators the sending of optical signal

**2.2 The Rear Panel Description**



the rear panel layout (matched load resistance of E1 line is 75 ohms)



the rear panel layout (matched load resistance of E1 line is 120 ohms)

### 2.2.1 Ethernet Interface

There are two Ethernet Ports.

### 2.2.2 E1 physical interface

E1 physical interface( 75Ω) : BNC

E1 physical interface( 120Ω) : RJ45

75Ω/RX : 75Ω un-balanced E1 input

75Ω/TX : 75Ω un-balanced E1 output

120ΩE1 : 120Ω balanced E1input and output

### 2.2.3 Power supply

AC220V/DC-48V is both available , users can select the power supply input according to requirements.

If -48V is needed, push switch on ‘DC-48V’ ; If AC220V is needed , push switch on “AC220V”.

If the power supply is -48V, connect the device + pole with power GND pole, the device -pole with power -48V.

## 3. Technical Specifications

### 3.1 Environmental

Operating Temperature: 0 to 50℃ 95% RH

Storage Temperature: -40 to 70℃ 95% RH

atmospheric pressure: 70 ~ 106 kpa

Non-corrosion and non-solvent gas; Non-dust; Non-magnetic field interference.

### 3.2 Power Requirements

Power Input: AC220V /DC-48V

Power Range: DC-48V ( - 36V ~ - 72V ) or AC220V (165~265V)

Power Consumption: <5 Walt

### 3.3 Mechanical Specifications

Dimensions: 430mm(Weight)×44mm(height)×  
203mm(depth)

















